



SFORZATO PMC-05EX

User Manual

Ver. 20231201

Included items

Please confirm that the following are included.

- 1) PMC-05EX main unit
- 2) AC cable

Table of Contents

1. Installation
2. How to connect
3. Cable to use

1. Installation



Remove the 4 fixing plates and 8 screws attached to the bottom plate. These plates secure the clock unit inside. When removed, the clock unit is placed on the bottom plate with spikes to prevent vibration from being transmitted to the unit.

Keep the removed plates and screws in a safe place. Be sure to install the fixing plates during transportation.

2. How to connect

- ① First, confirm that the PMC-05EX power switch is turned off. The power switch is on the bottom.
- ② Connect the power cord to the PMC-05EX and connect it to an electrical outlet.
- ③ Connect the 10MHz output BNC terminal to the BNC terminal on the back of the DSP-07EX / DSP-05 EX or other devices with a 50 ohm impedance BNC cable.
- ④ Turn on PMC-05EX.

PMC-05EX has two SMA outputs and one BNC output; all three can be used simultaneously.

3. Cable to use

For the cable to connect PMC-05EX and the clock input device, it operates even if the impedance is not 50 ohms, but results are usually better if you use 50 ohms.